


## User guide: screwing into Neatform bendy mdf

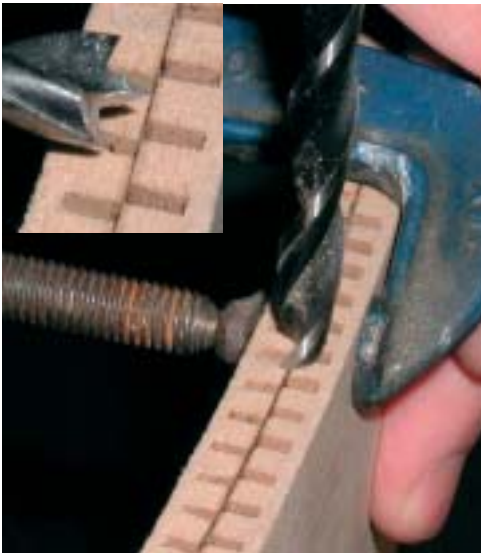

1

Use a centre point drill and clamp the outside of the area to be drilled to reduce risk of damage. Drill into the Neatform bendy mdf. Don't worry if the hole is messy as long as it is much larger and deeper than the screw it will contain.



2

Make sure the hole is dust free. Use a tough wood filler product such as Cuprinol 'Miracle Wood' or Loctite 'Repair Express'. Follow the instructions on the packet.



3

Produce a thin roll that easily fits deep inside the hole.



4

Press the filler firmly into the hole. A pilot hole for the screw can be made in the filler at this stage.



5

The filler can be screwed into immediately or left until it is dry.



Applicable for handles, hinges, hooks. . .

## User guide: Filling the edge of Neatform bendy mdf



1

A general purpose wood filler can be used to fill the edge of the curve.



2

When this is dry it can be sanded to give a smooth surface, ready to be painted